


READ THESE INSTRUCTIONS BEFORE YOU BEGIN INSTALLATION

■ WIRING DIAGRAMS

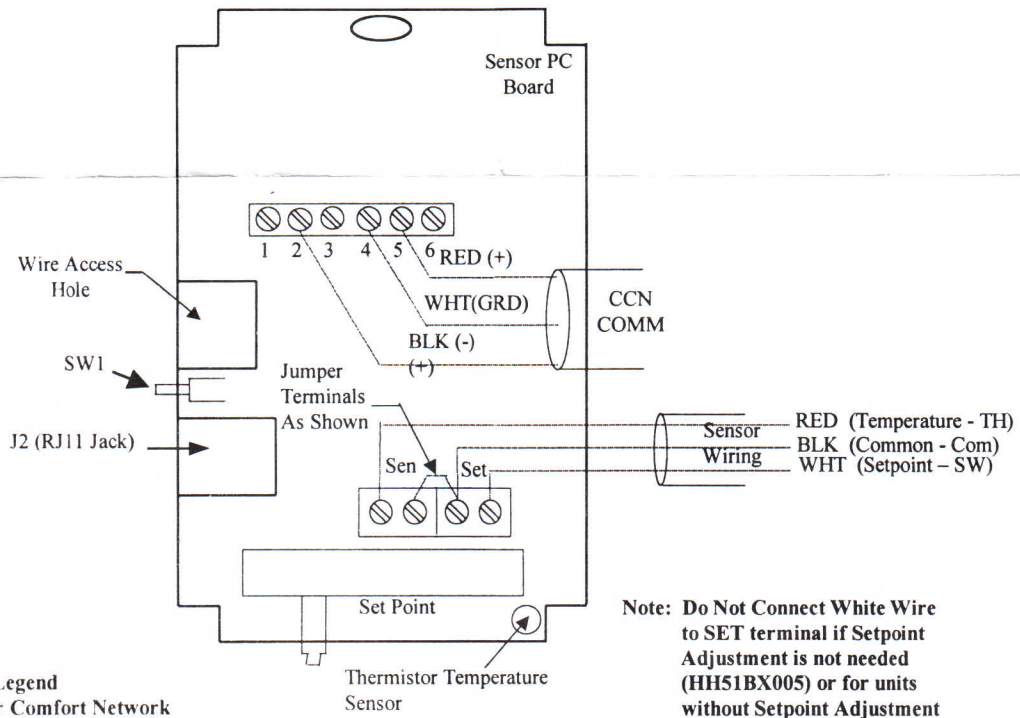

Legend
 CCN - Carrier Comfort Network
 SW1 - Switch
 Setpoint - Setpoint Adjust
 (HH51BX005 only)

Note: Do Not Connect White Wire to SET terminal if Setpoint Adjustment is not needed (HH51BX005) or for units without Setpoint Adjustment (HH51BX006).

■ TROUBLESHOOTING

Sensor reads 0 ohms or very low resistance
 Sensor reads infinity or very high resistance
 Erratic readings
 Sensor reading Varies w/ Slide Bar

Sensor or wires are shorted together
 Sensor or wires are open
 Bad wire connections
 White and Black wires are reversed.

■ MOUNTING INSTRUCTIONS

This unit is suitable for mounting to either drywall or a standard 2" x 4" junction box. The room sensor is provided with (2) 6/32 x 1" Slotted machine screws for junction box mounting.