




SIGA-CC1 Single Input Signal Module Installation Sheet

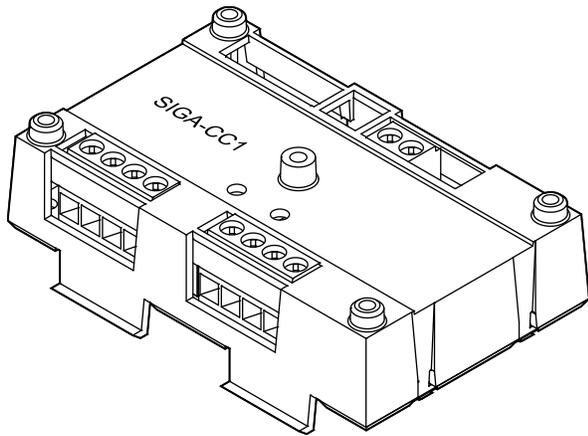

Description

The SIGA-CC1 Single Input Signal Module is an addressable module that is used to connect the following circuits:

- Audible and visible notification appliance circuits (synchronized or unsynchronized)
- Speaker circuits
- Two-way telephone communication circuits (three-state or four-state)

Upon command from the loop controller, the module connects supervised Class B signal or telephone circuits to the respective riser input. The riser input can be 24 VDC (to operate polarized audible and visible signal notification appliances), 25 or 70 VRMS (to operate audio evacuation speakers), or firefighter telephones.

The module does not provide signal synchronization. To meet UL 864 requirements for horn and strobe signal synchronization, you must install a Genesis Signal Master module.

The SIGA-CC1 module requires one address on the signaling line circuit (SLC). Addresses are assigned electronically. There are no address switches.

Diagnostic LEDs provide visible indication of the state of the module through the cover plate:

- Normal: Green LED flashes
- Alarm/active: Red LED flashes

Personality codes

Use the personality codes described below to configure the SIGA-CC1 module. See Table 1 for listing information

Table 1: Personality code listing information

Code	Description	UL 864	CAN/ULC-S527	EN 54-18
5	Signal - supervised output (Class B)	✓	✓	✓
6	Telephone - three-state (Class B)			
26	Telephone - four-state (Class B)	✓	✓	

Personality code 5: Signal - supervised output (Class B).

Configures the SIGA-CC1 module as a riser selector for audible and visible notification appliance circuits or for single-channel audio circuits. The output circuit is monitored for open or shorted wiring. If a short exists, the module will not activate in order to prevent shorting the riser. The module will activate once the short is cleared.

Personality code 6: Telephone - three-state (Class B).

Configures the module as a riser selector for a three-state firefighter telephone. When a telephone handset is plugged into its jack or lifted from its hook, the module generates its own ring-tone signal, making a separate ring-tone riser unnecessary. The module sends this signal to the control panel to indicate the presence of an off-hook condition, and waits for the system operator to respond to the call. When the system operator responds, the ring-tone signal is disabled.

Personality code 26: Telephone - four-state (Class B).

Configures the module as a riser selector for a four-state firefighter telephone. Operation is the same as Personality code 6 except that the module can distinguish when a telephone is off-hook and when the circuit is shorted, which causes a trouble condition.

Installation

Install this device in accordance with applicable national and local codes, ordinances, and regulations.

Notes


- The module is shipped from the factory as an assembled unit; it contains no user-serviceable parts and should not be disassembled.

- This module does not operate without electrical power. As fires frequently cause power interruption, discuss further safeguards with the local fire protection specialist.

To install the module:

1. Write the address assigned to the module on the label provided, and then apply the label to the module. Remove the serial number label from the module, and then attach it to the project documentation.
2. Connect the field wires. See "Wiring" below.
3. Using the self-tapping screw, attach the wall plate to the module. See Figure 1.
4. Using the four machine screws, attach the wall plate and module to the electrical box.

Figure 1: Installing the SIGA-CC1 module

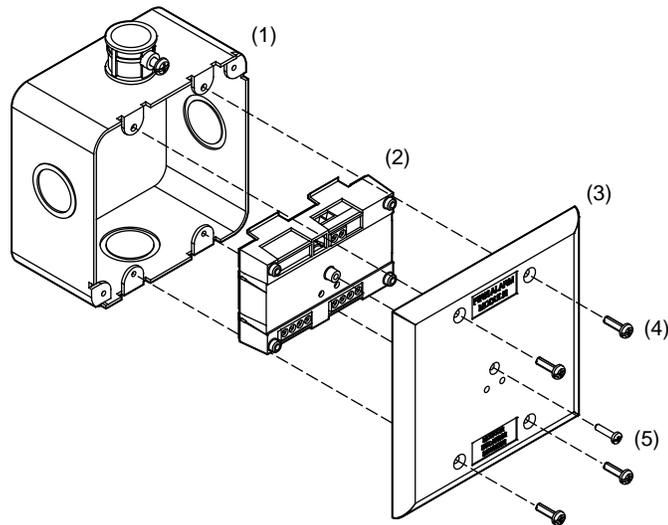

- | | |
|-------------------------------|------------------------------------|
| (1) Compatible electrical box | (4) #6-32 × 5/8 machine screw (4X) |
| (2) SIGA-CC1 module | (5) #4 × 1/2 self-tapping screw |
| (3) Wall plate | |


Protection from transient spikes

For installations in which the output circuit connects to electromechanical bells or horns, install a bipolar transient protector (P/N 235196P) to protect the module from transient spikes caused by switching inductive loads. Locate bells and horns at least 6 ft. (1.8 m) from the module.

To install a bipolar transient protector:

1. Install the transient protector across the output circuit inside the electrical box with the module. See Figure 2.

Figure 2: Bell circuit showing bipolar transient protector placement

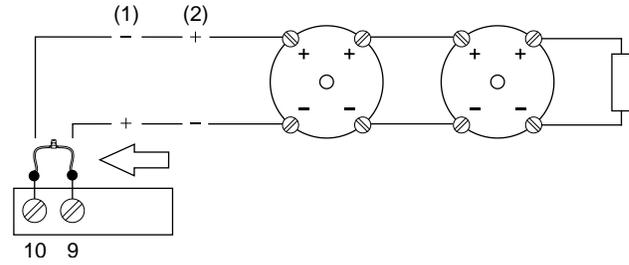

- (1) Normal state (2) Active state

Wiring

Wire this device in accordance with applicable national and local codes, ordinances, and regulations.

General wiring notes

- Refer to the Signature loop controller installation sheet for SLC wiring specifications. Refer to the firefighter phone installation sheet for additional details.
- Each terminal on the module is limited to a single conductor.
- Test resistors are supplied with the SIGA-CC1 to prevent trouble signals on unused circuits during installation. When connecting field wires, remove the test resistors and install a UL/ULC Listed 47 kΩ EOLR at the end of the circuit.
- The module does not support conventional smoke detectors.


Riser wiring notes

- For maximum line impedance, refer to the installation manual for the fire alarm panel. Maximum circuit capacitance is 0.1 μF.
- If the riser is used for more than one notification zone, install in accordance with the survivability from attack by fire requirements in NFPA 72 *National Fire Alarm and Signaling Code*.
- Circuit and riser wiring is different when four-state firefighter telephones are installed on three-state circuits. Before replacing a SIGA-CC1 module, tag the wires to ensure correct reconnection.
- The SIGA-CC1 module does not supervise the riser; the fire alarm control panel provides this function.

To wire the module:

1. Verify that all field wiring is free of opens, shorts, and ground faults.
2. Strip 1/4 in. (about 6 mm) from the ends of all wires that connect to the terminal block of the module.
When stripping wire ends, exposing more wire may cause a ground fault; exposing less wire may result in a faulty connection.
3. Connect the field wires. See Figure 3 through Figure 5.


Figure 3: Wiring diagram for NAC (personality code 5)

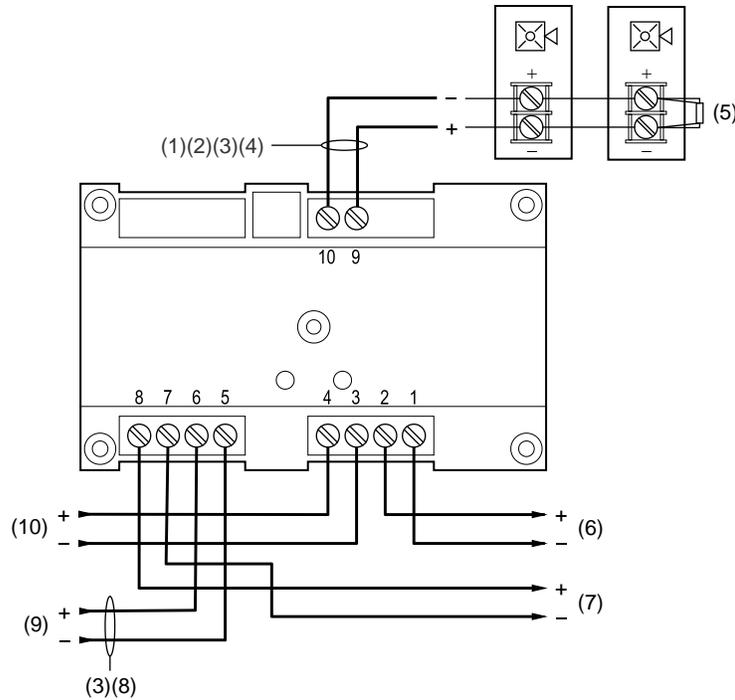

- | | |
|---|---|
| <p>(1) Signal polarity is shown when the circuit is in supervisory state. Polarity reverses when the circuit is active.</p> <p>(2) Supervised.</p> <p>(3) Power-limited unless connected to a nonpower-limited source. If the source is nonpower-limited, eliminate the power-limited mark and maintain a minimum of 0.25 in. (6.4 mm) space from power-limited wiring. For other mounting methods, see enclosure and bracket installation sheets to maintain separation of power-limited and nonpower-limited wiring. The wire size must be capable of handling fault current from nonpower-limited source. — or —</p> | <p>(4) If using a G1-P Genesis series horn while connected to a compatible fire alarm control panel, a CDR-3 Bell Coder must be used to comply with ANSI S3.41.</p> <p>(5) 47 kΩ EOLR.</p> <p>(6) Signaling line circuit (SLC) to next device.</p> <p>(7) AUX riser (to next module or riser supervisory device).</p> <p>(8) Power-limited regulated, power supply UL/ULC Listed for fire protective signaling systems.</p> <p>(9) AUX riser (from previous device).</p> <p>(10) Signaling line circuit (SLC) from previous device. Supervised and power-limited.</p> |
|---|---|



Use type FPL, FPLR, FPLP, or permitted substitute cables, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6.4 mm) space or by a nonconductive sleeve or nonconductive barrier from all other conductors. Refer to the NFPA 70 *National Electrical Code* for more details.

Figure 4: Wiring diagram for audio (personality code 5)

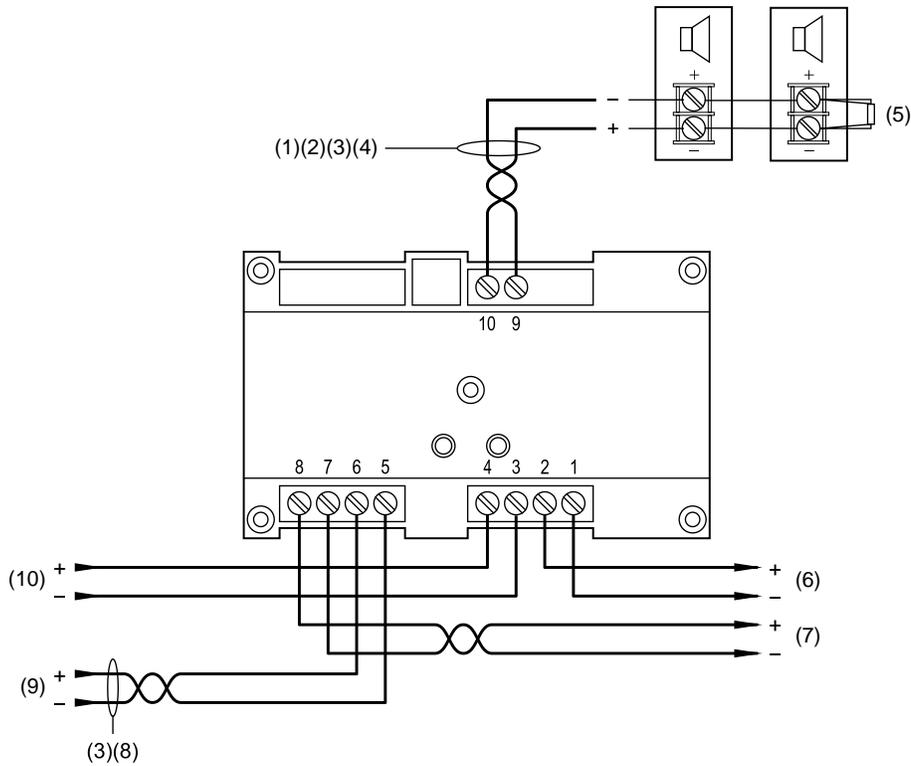

- | | |
|--|--|
| <p>(1) Signal polarity shown when the circuit is in supervisory state. Polarity reverses when the circuit is active.</p> <p>(2) Supervised.</p> <p>(3) Power-limited unless connected to a nonpower-limited source. If the source is nonpower-limited, eliminate the power-limited mark and maintain a minimum of 0.25 in. (6.4 mm) space from power-limited wiring. For other mounting methods, see enclosure and bracket installation sheets to maintain separation of power-limited and nonpower-limited wiring. The wire size must be capable of handling fault current from nonpower-limited source.
— or —
Use type FPL, FPLR, FPLP, or permitted substitute cables, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6.4 mm) space or by a nonconductive sleeve or nonconductive barrier from all other conductors. Refer to the NFPA 70 <i>National Electrical Code</i> for more details.</p> | <p>(4) Unshielded twisted pair.</p> <p>(5) 47 kΩ EOLR (P/N EOL-47).</p> <p>(6) Signaling line circuit (SLC) to next device.</p> <p>(7) Audio riser (to next module or supervisory end of line device).</p> <p>(8) Unshielded twisted pair. Use shielded twisted pair when installed in the same conduit as with a telephone riser.</p> <p>(9) Audio riser (from previous device).</p> <p>(10) Signaling line circuit (SLC) from previous device. Supervised and power-limited.</p> |
|--|--|

Figure 5: Class B telephone (personality codes 6 and 26)

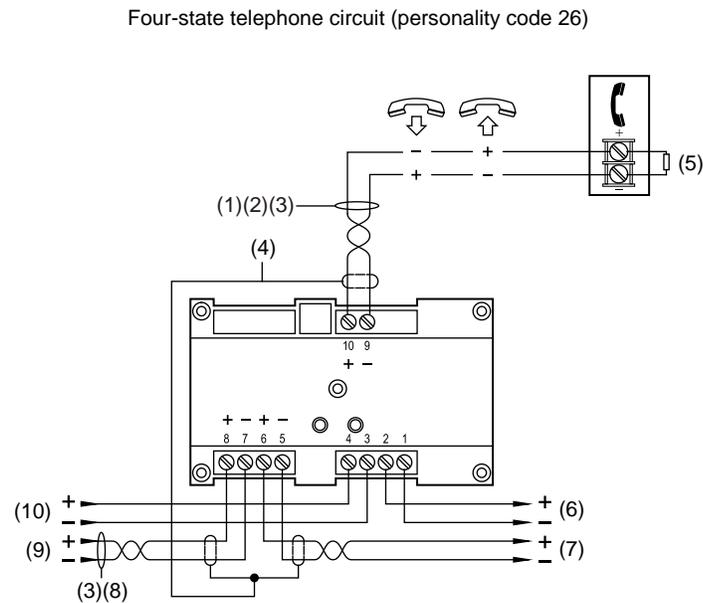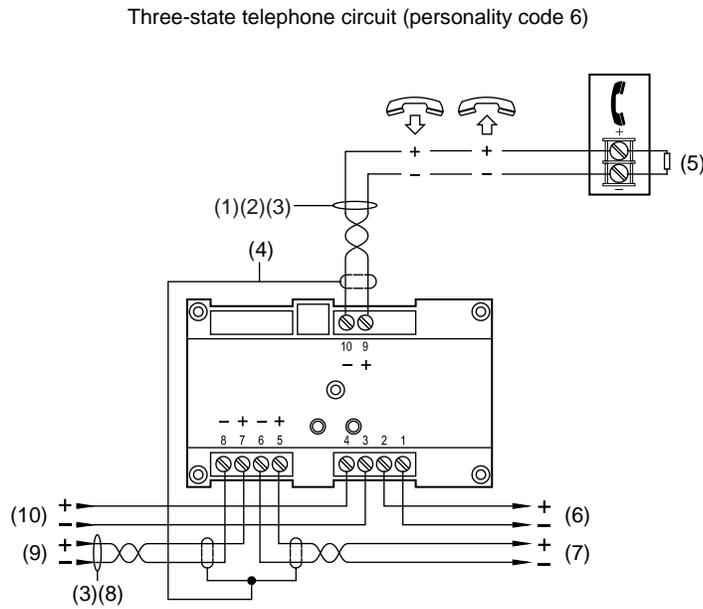


- (1) Telephone circuit. The plus and minus symbols indicate signal polarity.
- (2) Supervised.
- (3) Power-limited unless connected to a nonpower-limited source. If the source is nonpower-limited, eliminate the power-limited mark and maintain a minimum of 0.25 in. (6.4 mm) space from power-limited wiring. For other mounting methods, see enclosure and bracket installation sheets to maintain separation of power-limited and nonpower-limited wiring. The wire size must be capable of handling fault current from nonpower-limited source.
— or —
Use type FPL, FPLR, FPLP, or permitted substitute cables, provided these power-limited cable conductors extending beyond the jacket are separated by a minimum of 0.25 in. (6.4 mm) space or by a nonconductive sleeve or nonconductive barrier from all other conductors. Refer to the NFPA 70 *National Electrical Code* for more details.
- (4) Required if the distance from the SIGA-CC1 to the phone is greater than 5 ft. Shield must be continuous, insulated, and isolated from ground, except for the connection to chassis ground in the control panel.
- (5) 47 kΩ EOLR (P/N EOL-47).
- (6) Signaling line circuit (SLC) to next device.
- (7) Telephone riser (to next module or end-of-line supervisory device).
- (8) Use shielded twisted pair. Shields must be continuous and grounded at the panel end.
- (9) Telephone riser (from previous device).
- (10) Signaling line circuit (SLC) from previous device. Supervised and power-limited.

Specifications

Operating voltage range	15.20 to 19.95 VDC
Current	
Standby	310 μ A
Activated	135 μ A
Maximum line impedance	Refer to the control panel installation manual
Ground fault impedance	10 k Ω
Output ratings (special applications)	
24 VDC	2 A
25 VRMS audio	50 W
70 VRMS audio	35 W
EOL resistor value	47 k Ω
Circuit resistance	Refer to the control panel installation manual
Circuit capacitance	0.1 μ F max.
EOLR	47 k Ω (P/N EOL-47)
Circuit designation	
Signaling line circuits	Class A, Style 6 or Class B, Style 4
Telephone riser circuits	Class B, Style 4
Notification line circuits	Class B, Style Y
LPCB/CPR electrical box Requirements	Plastic box with cover plate, no gaps or unused holes
Minimum size W x H x D	3.5 x 3.5 x 1.5 in. (85 x 85 x 38 mm)
Compatible electrical boxes	2-1/2 in. (64 mm) deep dual-gang box; 4 in. square box 1-1/2 in. (38 mm) deep box with a dual-gang cover
Wire sizes	12 to 18 AWG (1.0 to 4.0 mm ²)
Operating environment	
Temperature	32 to 120°F (0 to 49°C)
Relative humidity	0 to 93%, noncondensing
Storage temperature range	-4 to 140°F (-20 to 60°C)

Regulatory information

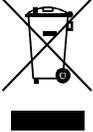Manufacturer	Edwards, A Division of UTC Fire & Security Americas Corporation, Inc. 8985 Town Center Parkway, Bradenton, FL 34202, USA Authorized EU manufacturing representative: UTC Fire & Security B.V. Kelvinstraat 7, 6003 DH Weert, Netherlands
Year of manufacture	The first two digits of the DATE MFG number (located on the product identification label) are the year of manufacture.
FCC compliance	This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
North American standards	CAN/ULC-S527, UL 864
EN 54	EN 54-18: 2005 Input/output devices
EU compliance	
CPR certificates	0832-CPR-F0840
	2002/96/EC (WEEE directive): Products marked with this symbol cannot be disposed of as unsorted municipal waste in the European Union. For proper recycling, return this product to your local supplier upon the purchase of equivalent new equipment, or dispose of it at designated collection points. For more information, see: www.recyclethis.info .

Contact information

For contact information, see www.est-fire.com.